

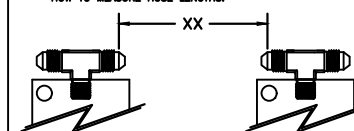


	ILLUSTRATION	QTY	P/A-ACC P/N	DESCRIPTION
B		9	HC14648	MANIFOLD, FULL ASS'Y
			BOM (EACH)	
		1 3 1	H810680 FF00019 FF01835	MANIFOLD CONNECTOR, STRAIGHT C/P, 37° FLARE
		2	FA80200	1/4-20 HEX SCREW x 1 1/4" LONG
E		22	FA05768	JIFFY CLIP (NOT SHOWN)
F		22	FA30408	1/4-20 6THD SCREW x 3/8" LONG (NOT SHOWN)

ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
			NOTE: HOSE AND LOOSE FITTINGS SUPPLIED IN BULK. HOSE ASSEMBLY FABRICATION BY CUSTOMER AT THEIR FACILITY. XX = LENGTH IN INCHES
DIRM(0)-XX	1	14400-XX	XX =
DIRM(1)-XX	1	14400-XX	XX =
DIRM(2)-XX	1	14400-XX	XX =
DIRM(3)-XX	1	14400-XX	XX =
DIRM(4)-XX	1	14400-XX	XX =
DIRM(1)-XX	1	14400-XX	XX =
DIRM(2)-XX	1	14400-XX	XX =
DIRM(3)-XX	1	14400-XX	XX =
DIRM(4)-XX	1	14400-XX	XX =
DIRM(5)-XX	1	14400-XX	XX =
DIRM(1)-XX	1	14400-XX	XX =
DIRM(2)-XX	1	14400-XX	XX =
DIRM(1)-XX	1	14400-XX	XX =
DIRM(2)-XX	1	14400-XX	XX =
DIRM(3)-XX	1	14400-XX	XX =
DIRM(4)-XX	1	14400-XX	XX =

NOTE: WHEN SHIPPING BULK HOSE AND FITTINGS,
SEND THE FOLLOWING QUANTITY OF ITEMS;
HOSE, PART #H014500, 130 FEET
FITTINGS, PART #FF14502, 34 PIECES

HOW TO MEASURE HOSE LENGTHS:



IMPORTANT: LEAVE ROOM FOR PRESS AND CLAMP MOVEMENT

DI-8DL-CM501

		PFA, INC. N118 W18251 BUNSEN DRIVE, GERMANTOWN, WI. 53022 262-250-4410, 262-250-4409 (fax), pfa-inc.com
DEM	8-18-14	
SCALE	N.T.S.	INSTALLATION KIT
SHEET	1 of 1	DRAWING NUMBER DI-8DL-CM501