


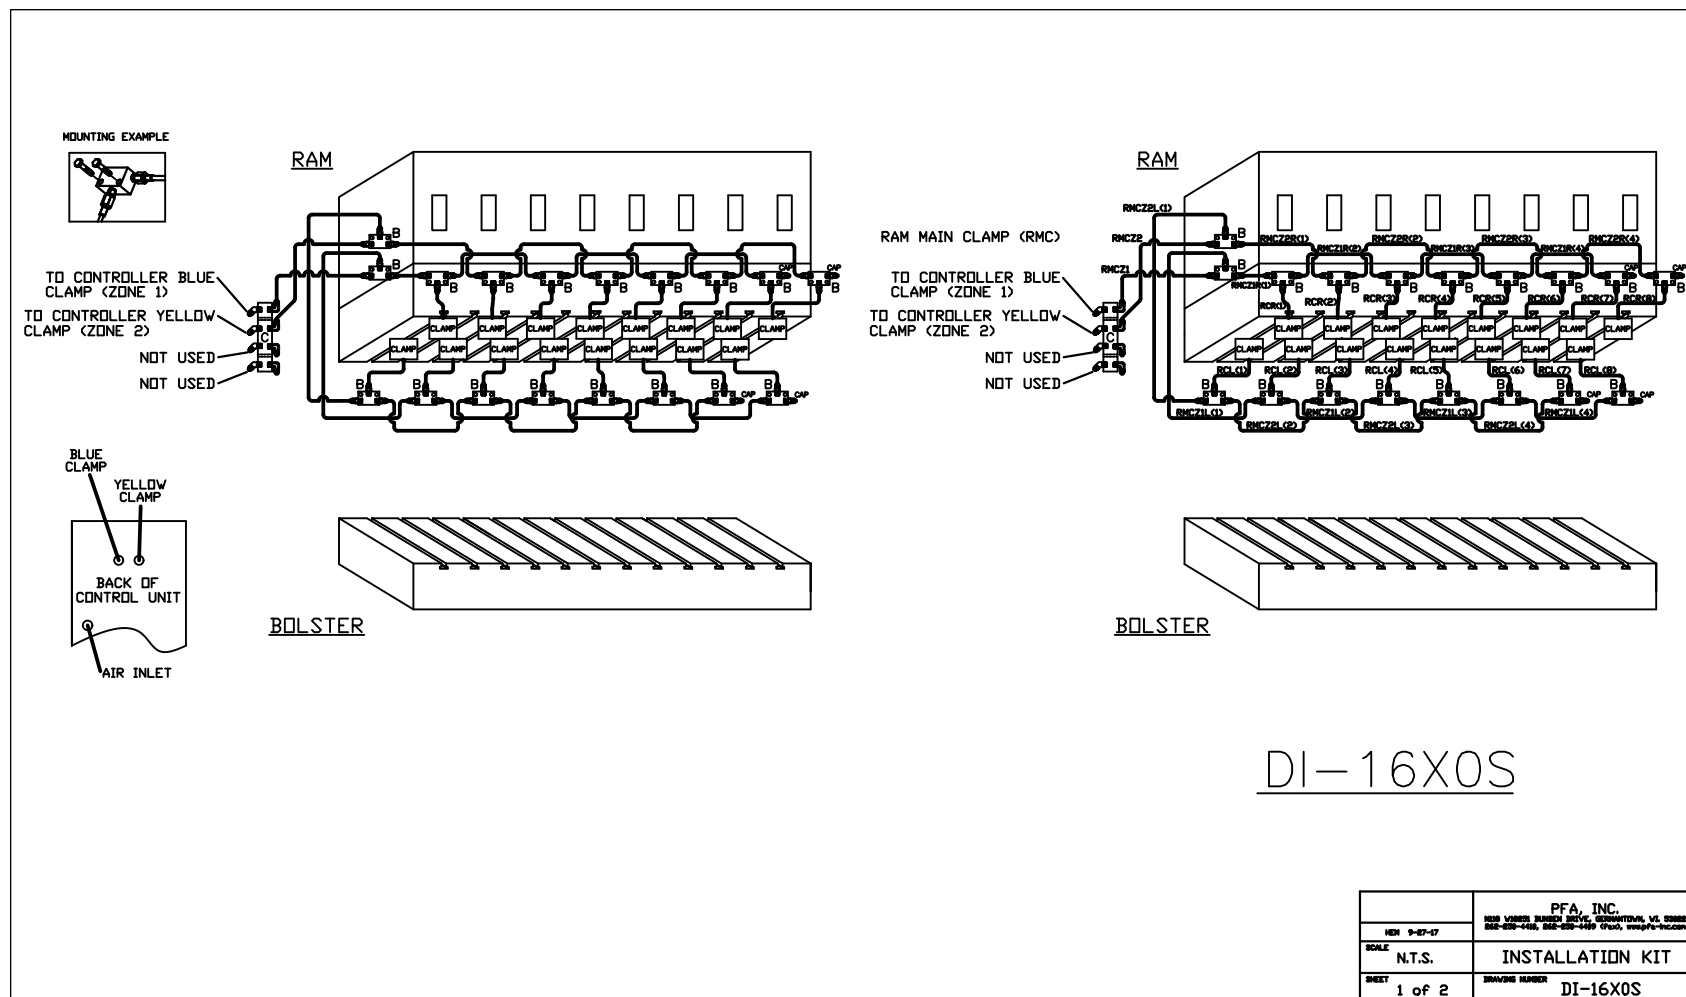

DI-16X0S INSTALLATION KIT			
ILLUSTRATION	QTY	PFA-ADJ P/N	DESCRIPTION
B	18	HC14648	MANIFOLD, FULL ASS'Y
		BOM (EACH)	
		1	HB10880
		3	FF00118
C	1	HC10080	MANIFOLD, FULL ASS'Y
		BOM (EACH)	
		1	HB10880
		4	FF00053
D	20	FA08237	DOUBLE JIFFY CLIP (NOT SHOWN)
		BOM (EACH)	
		1	HB10880
		4	FF00053
E	30	FA05768	JIFFY CLIP (NOT SHOWN)
		BOM (EACH)	
		1	HB10880
		4	FF00053
F	50	FA30408	1/4-20 STD. SCREW x 3/8" LONG (NOT SHOWN)
		BOM (EACH)	
		1	HB10880
		4	FF00053